 
 
 
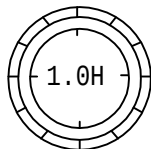 
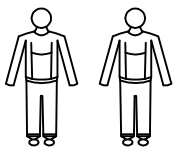 



Seaford

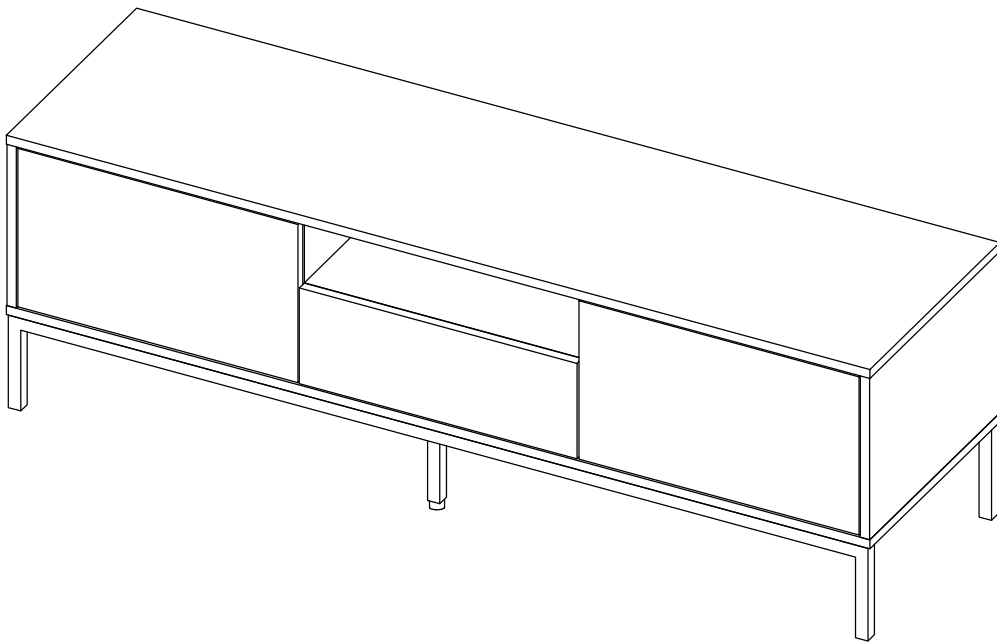

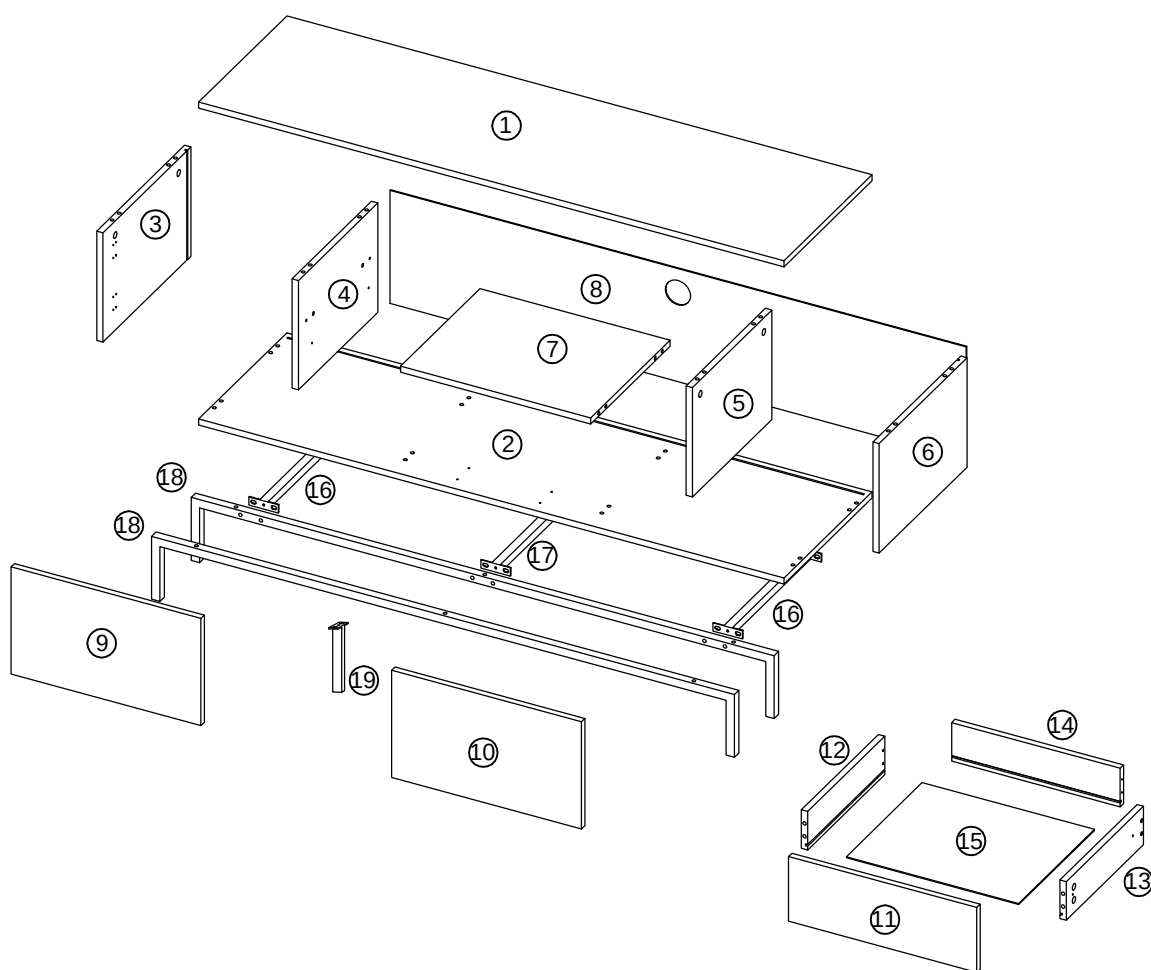


A 6.3×45mm  16PCS	B Ø15×12mm  16PCS	C Ø8×30mm  20PCS	D 7×38mm  8PCS	E 4×35mm  4PCS	F 3.5×14mm  40PCS
G L=350mm  2PCS	H  4PCS	I  4PCS	J  4PCS	K 4mm  1PC	L M6×28mm  6PCS
M M6×15mm  14PCS	N  1PC				

 
1

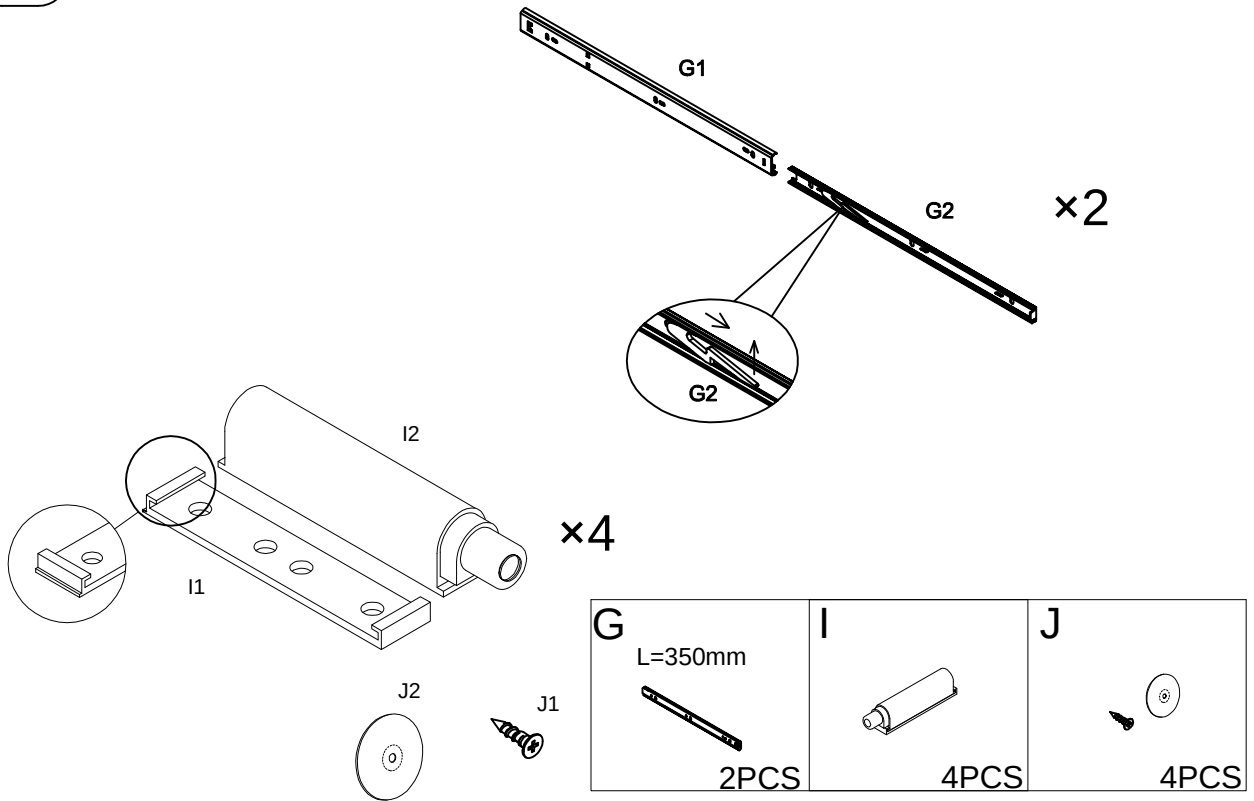


2

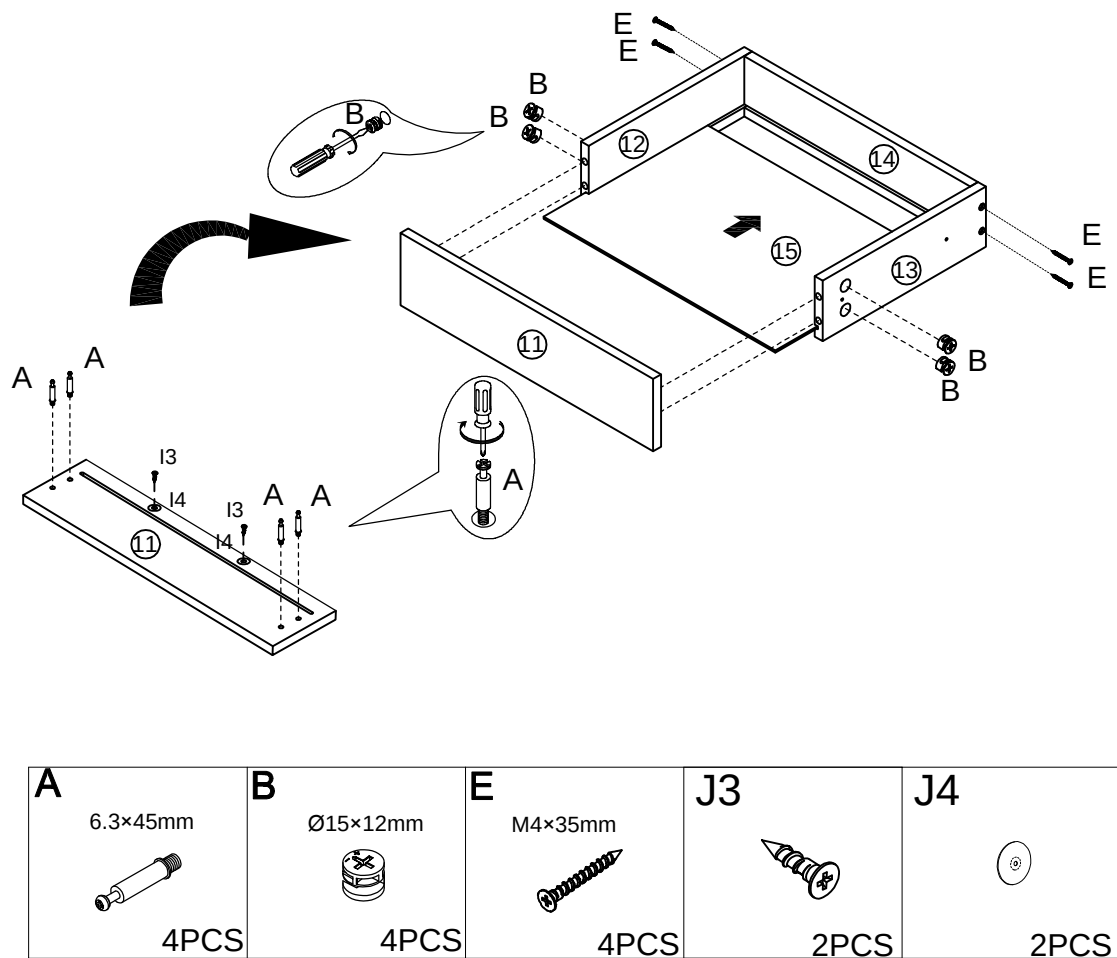 


3

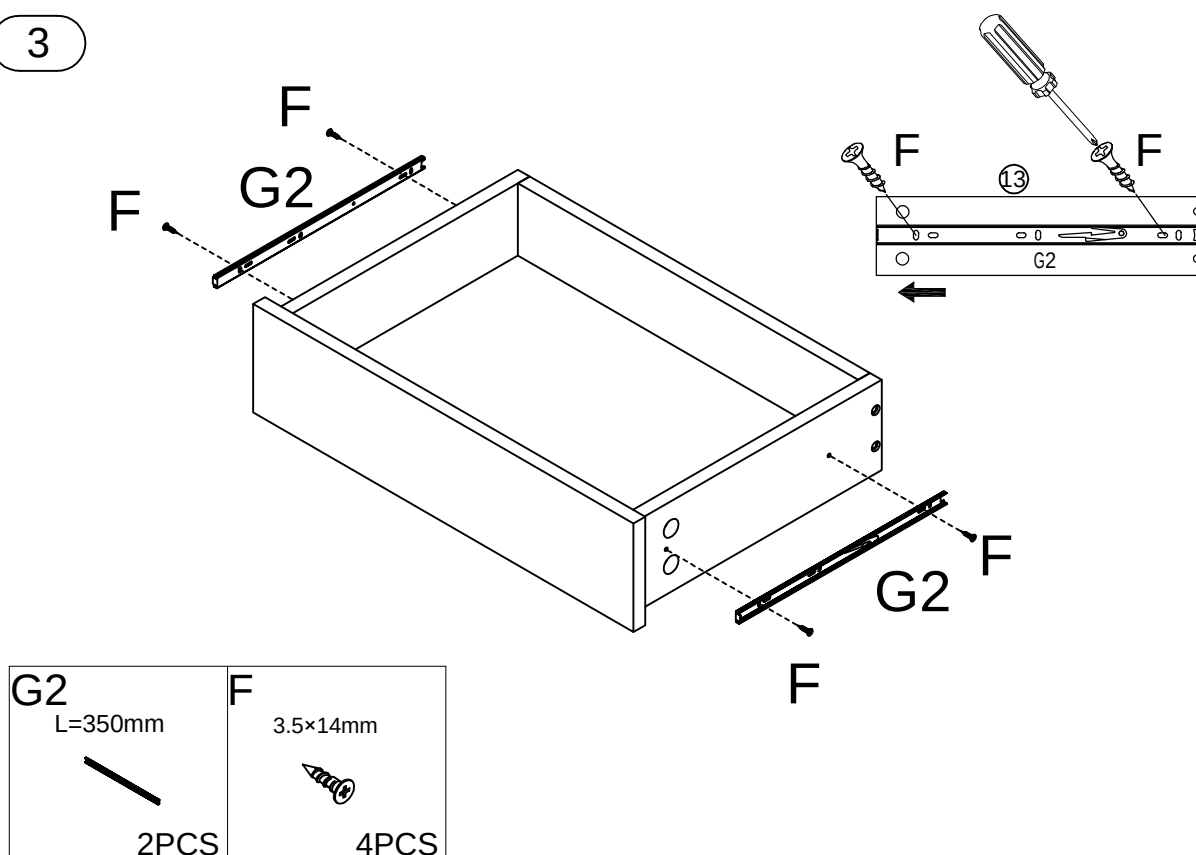 


4

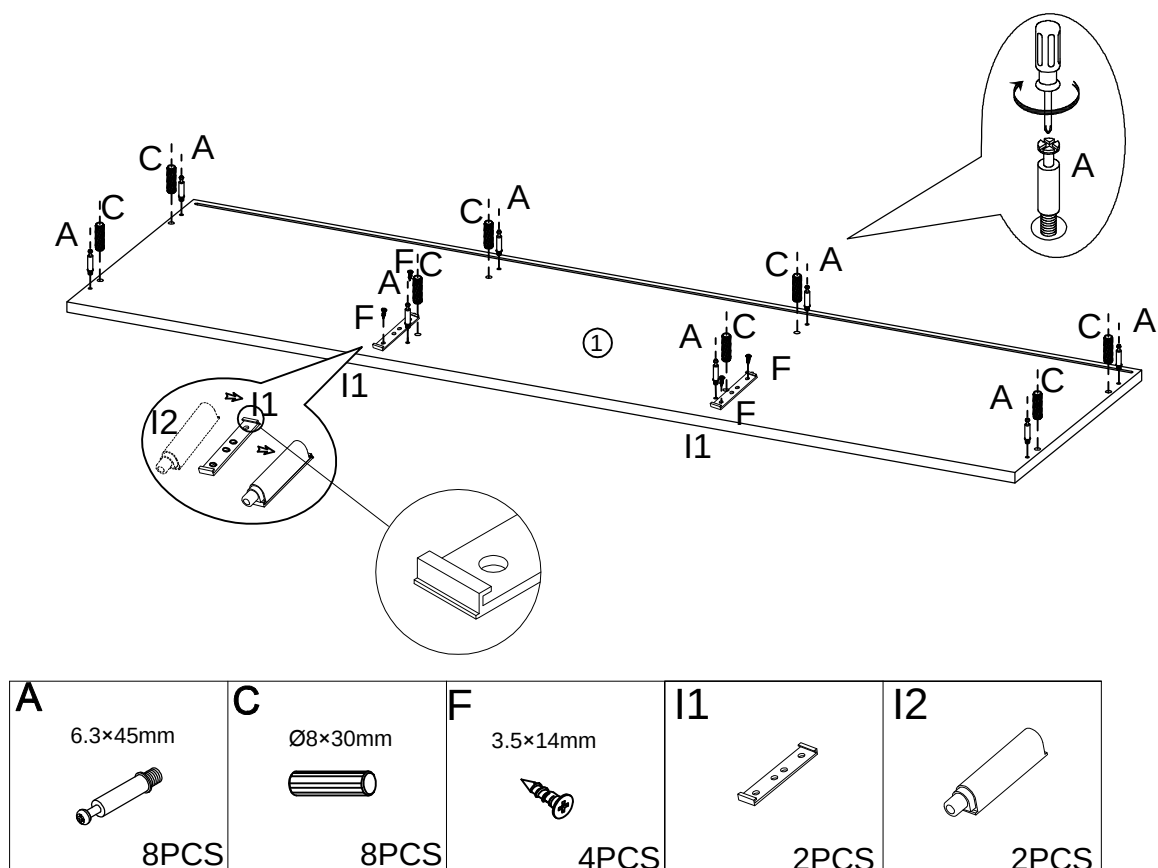 



5

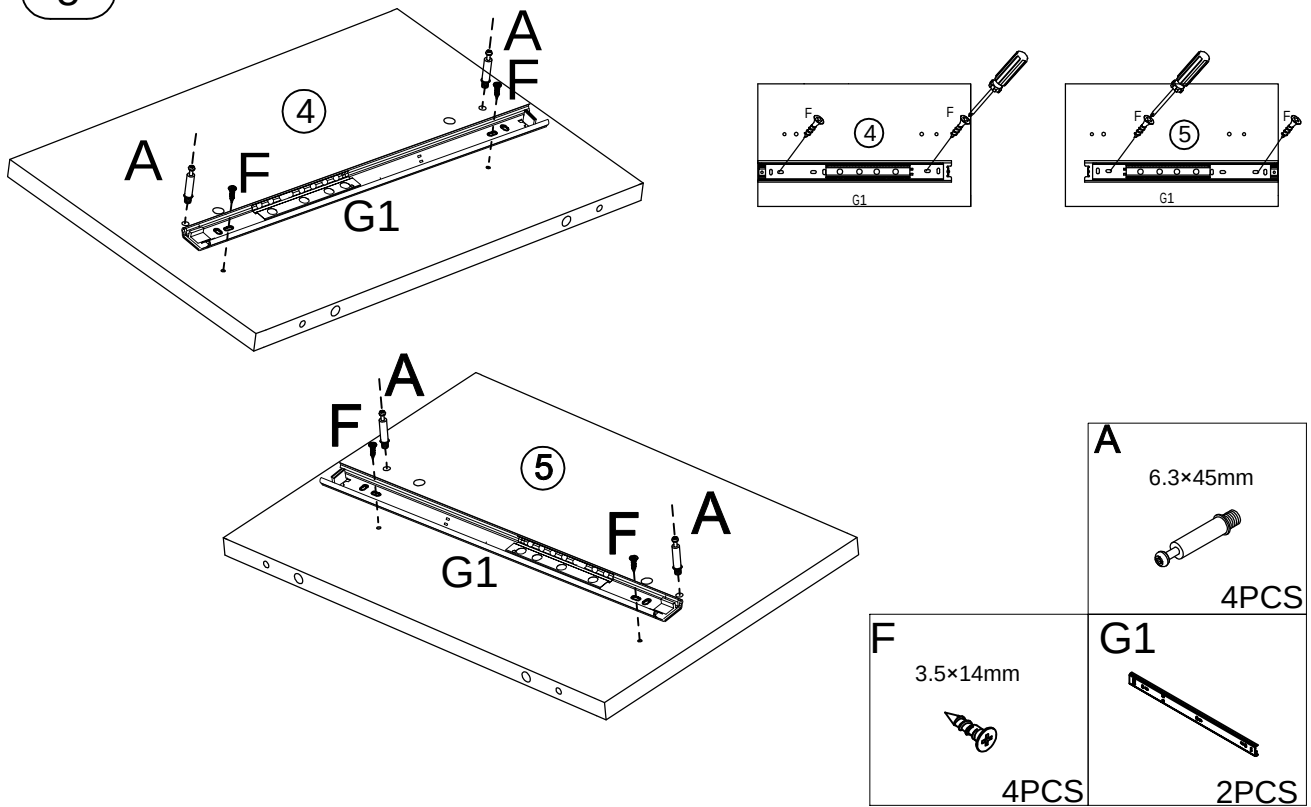 



6

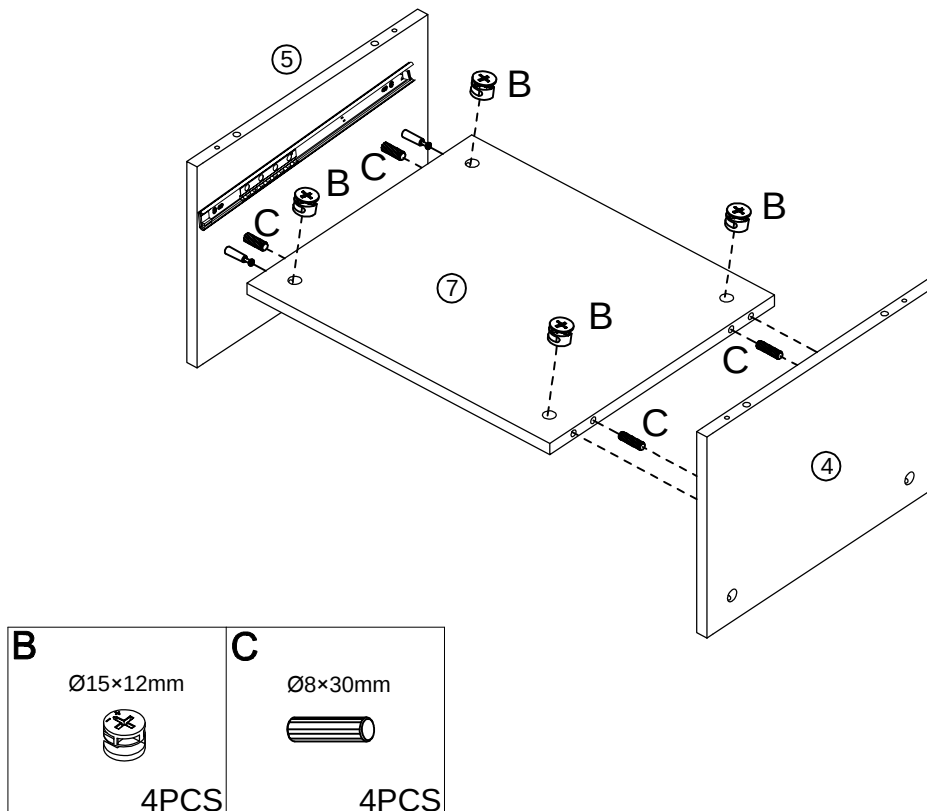 


7

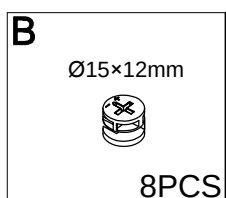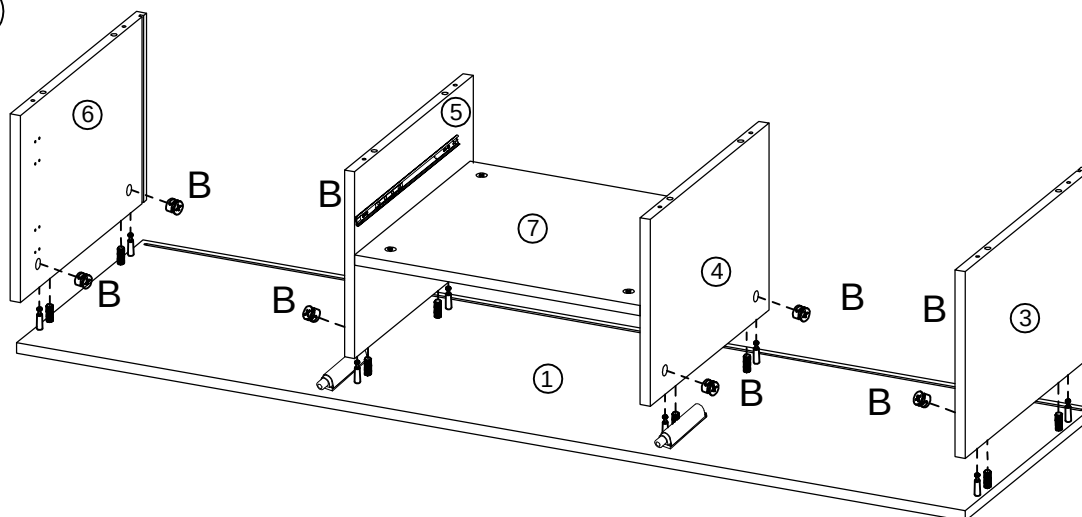  


8

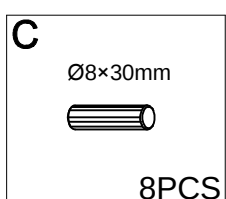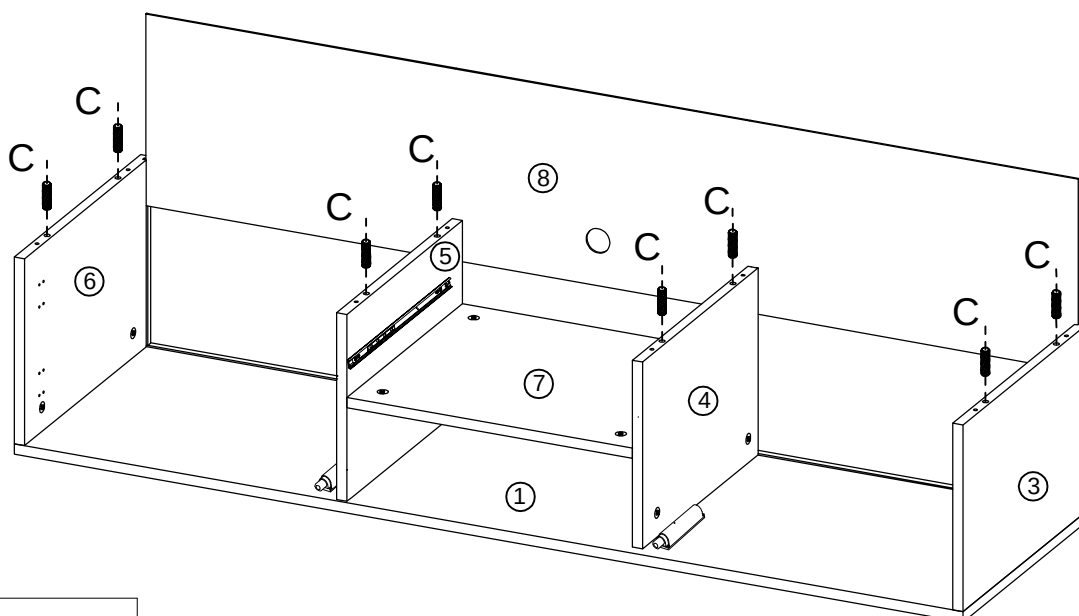  


9

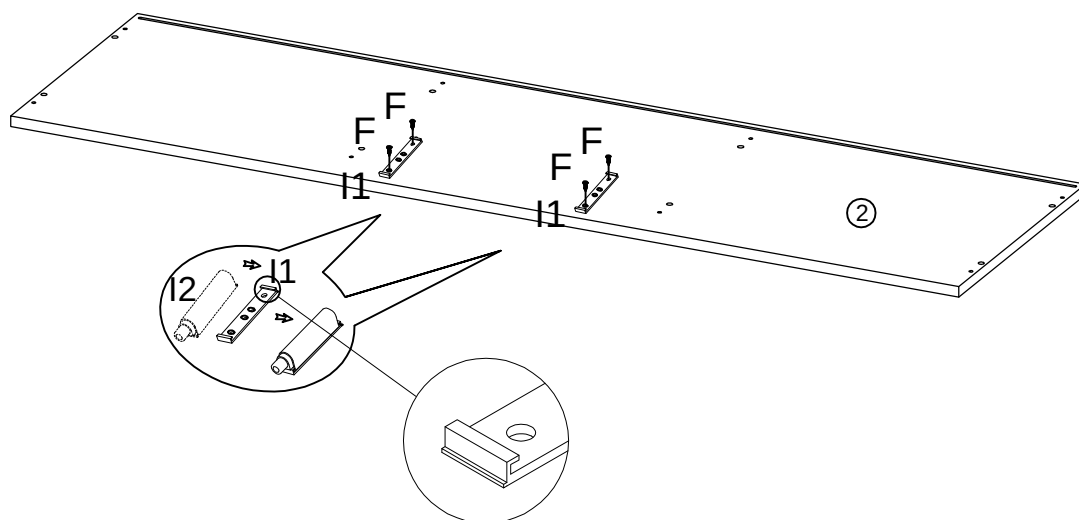 


 
F M3.5×14mm 	I1 	I2 
4PCS	2PCS	2PCS

 10


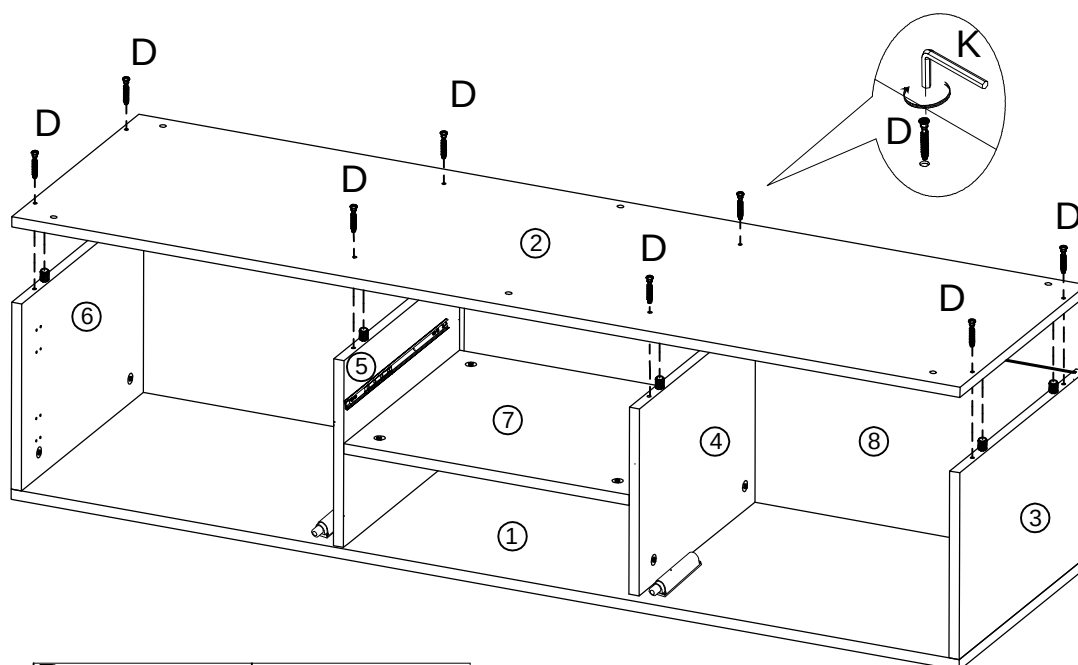


D 7×38mm 	K 4mm 
8PCS	1PC

  
11

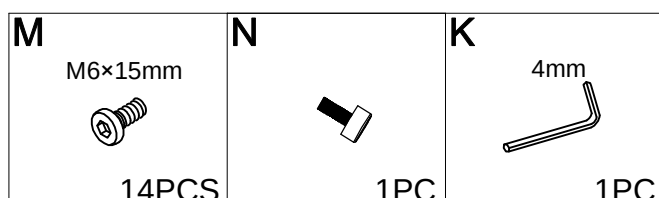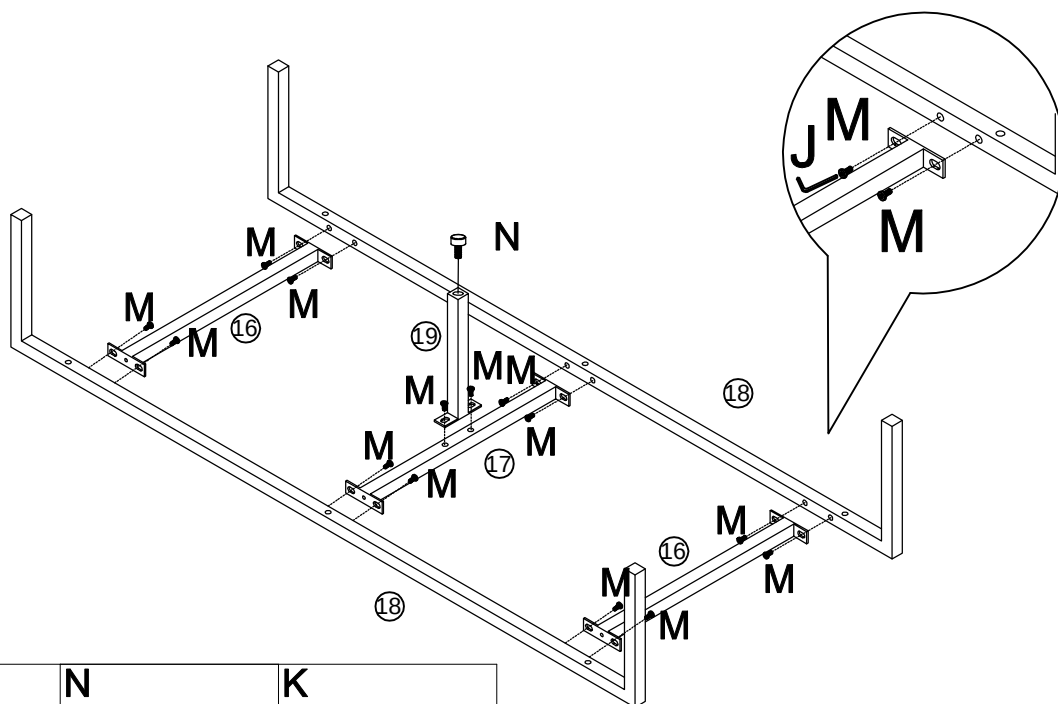

12

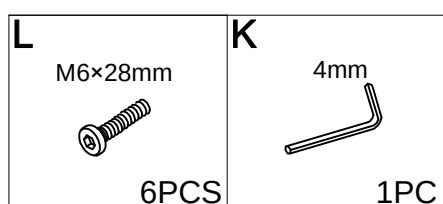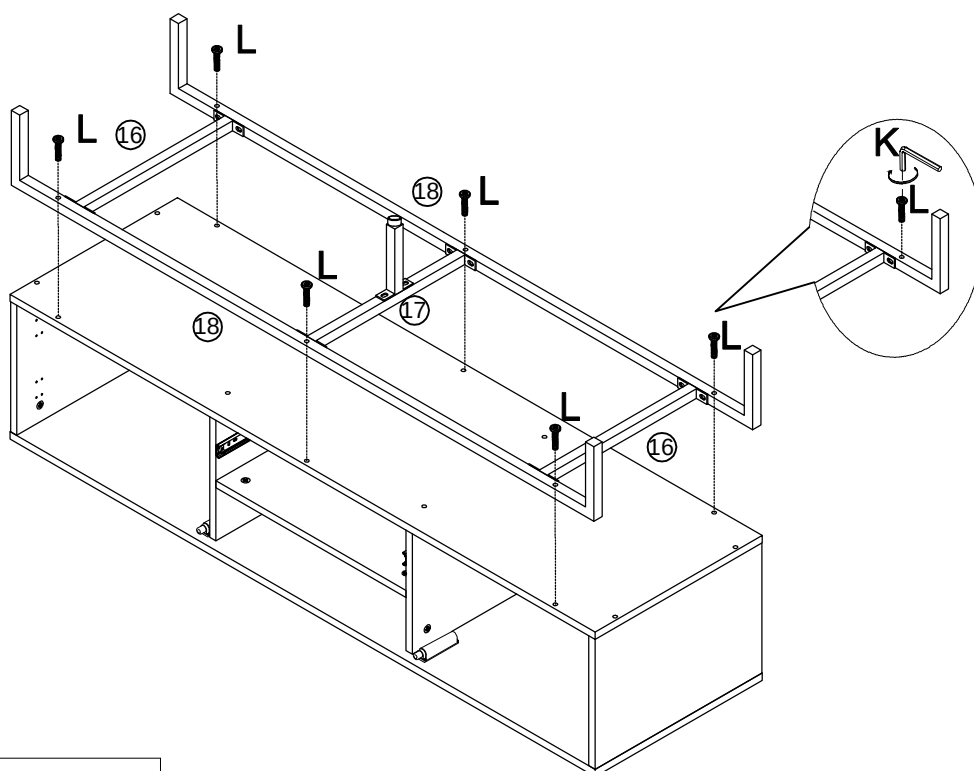  


13

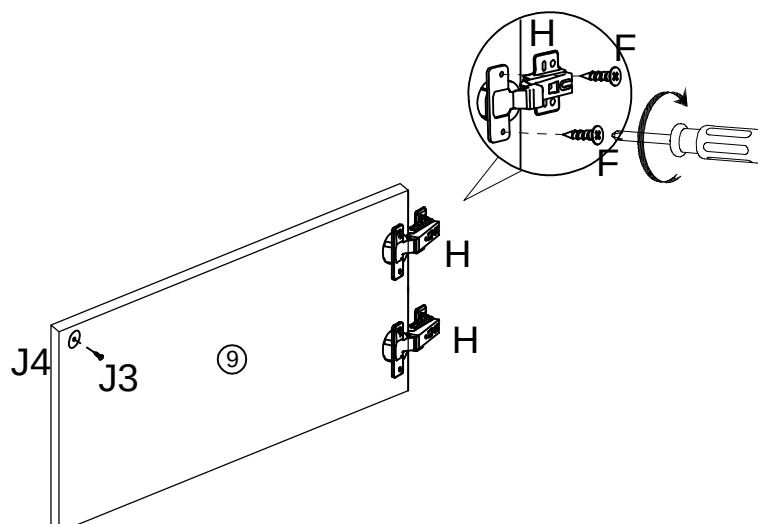 

F	H	J3	J4
M3.5×14mm			
4PCS	2PCS	1PC	1PC

 
14

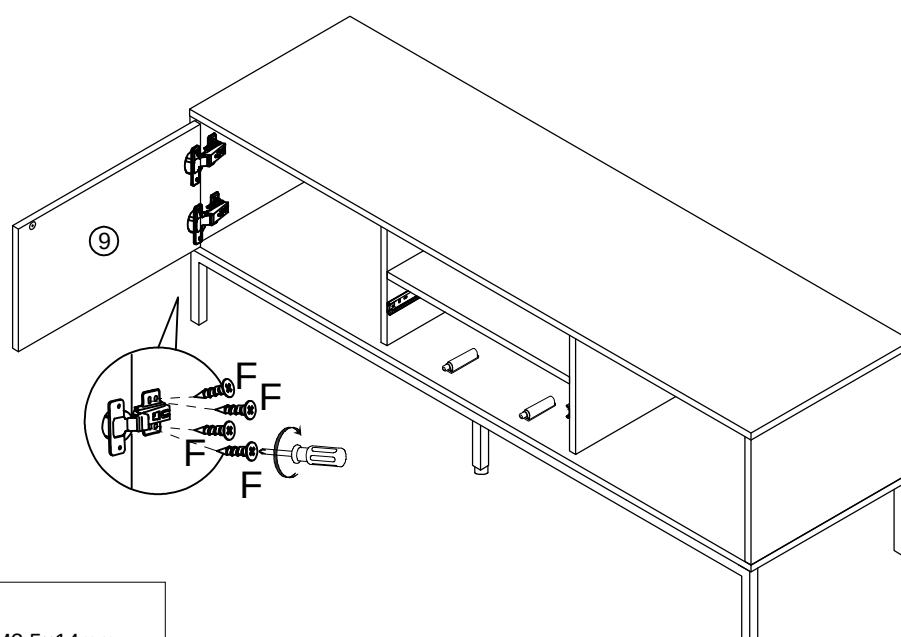

F
M3.5×14mm


8PCS

 15

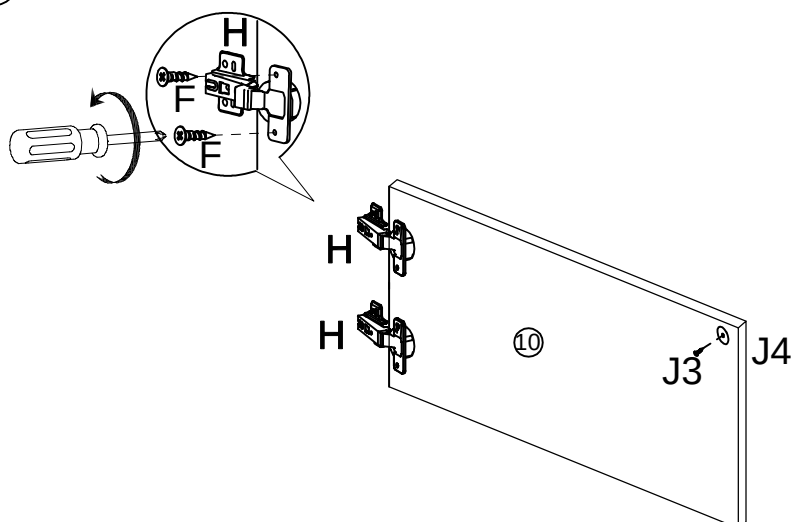

F	H	J3	J4
M3.5×14mm			
			
4PCS	2PCS	1PC	1PC

 
16

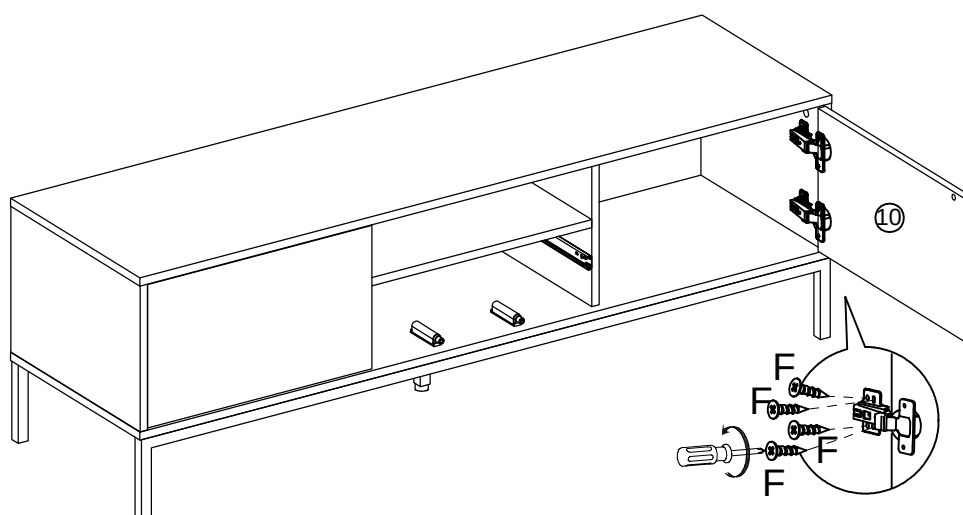


F
M3.5×14mm



8PCS

 17

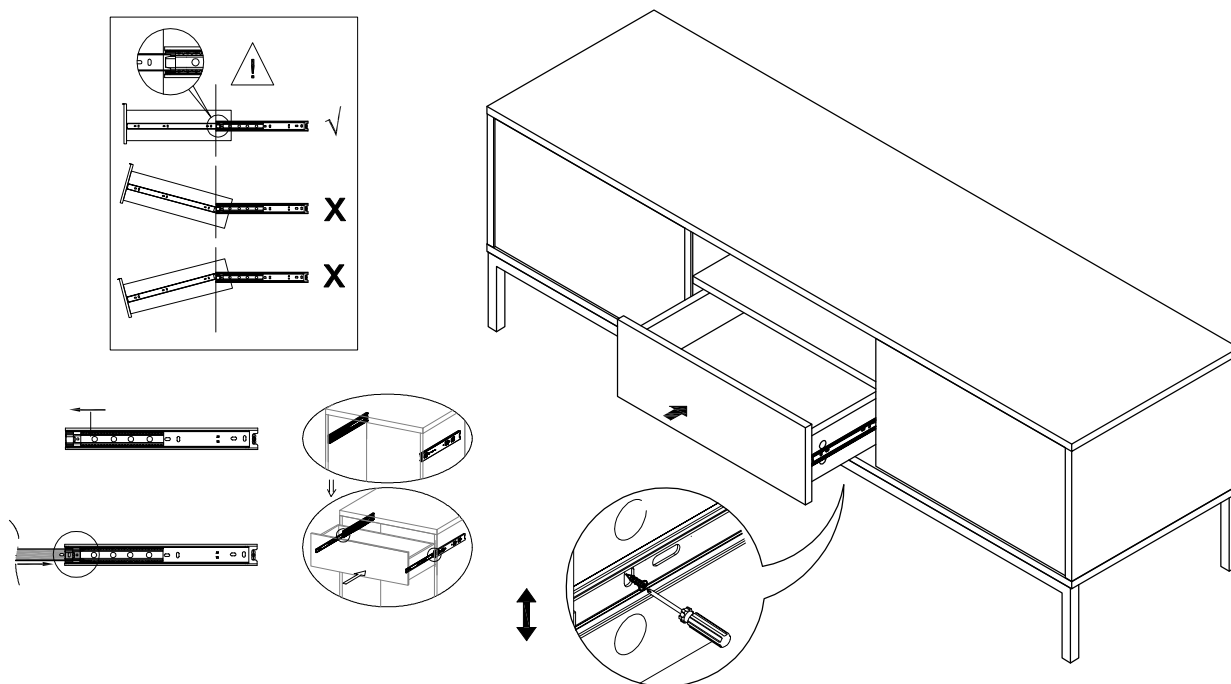

18


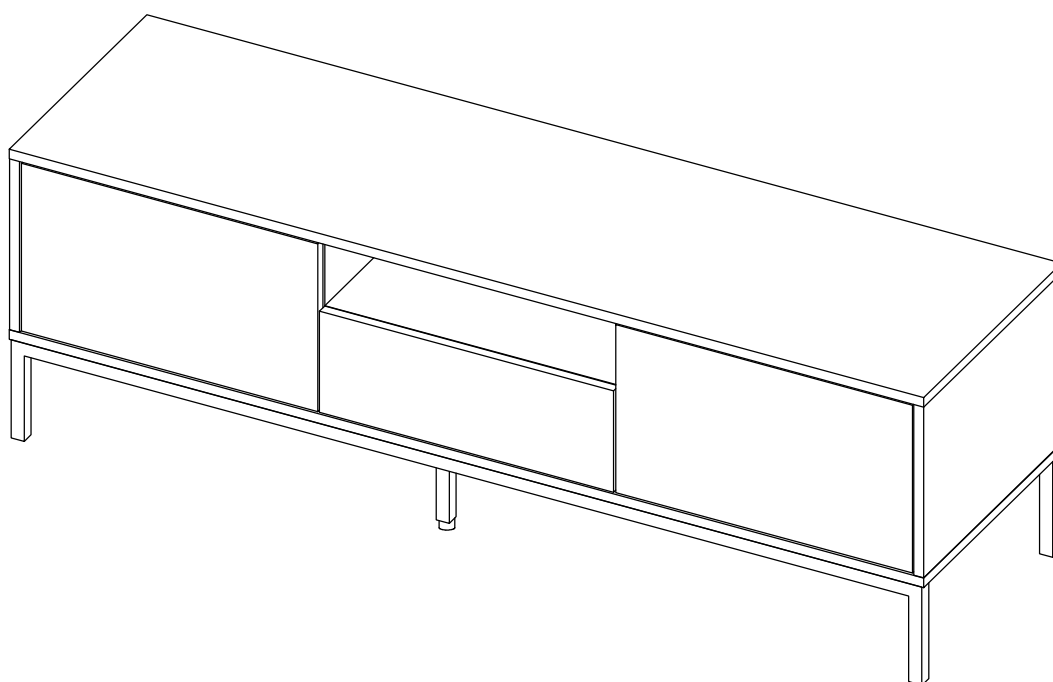 


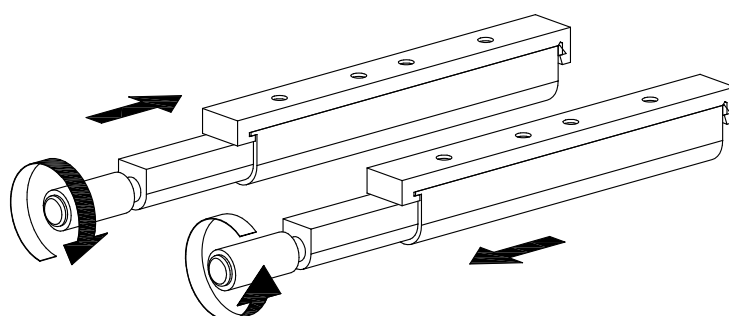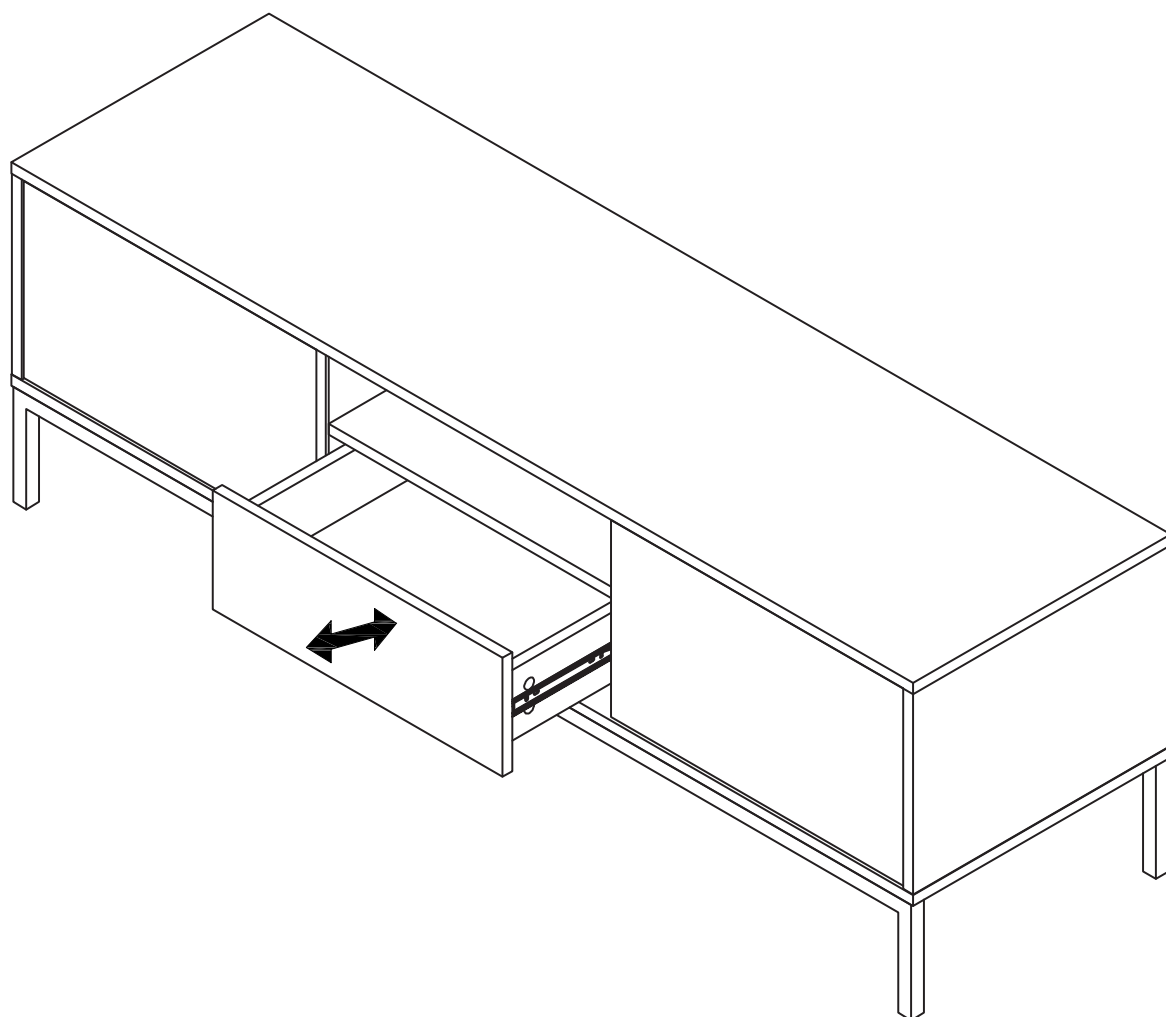  





TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).

 
 
STEP 14.1
Open the door.

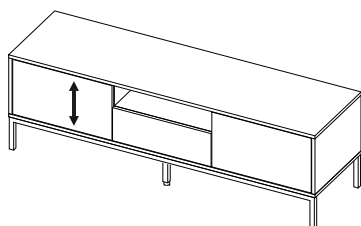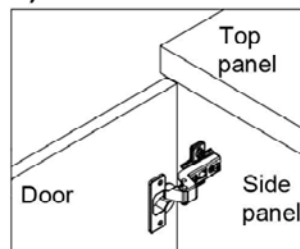

  STEP 14.2
Adjust the door panels
upward or downward

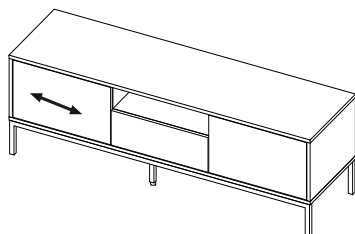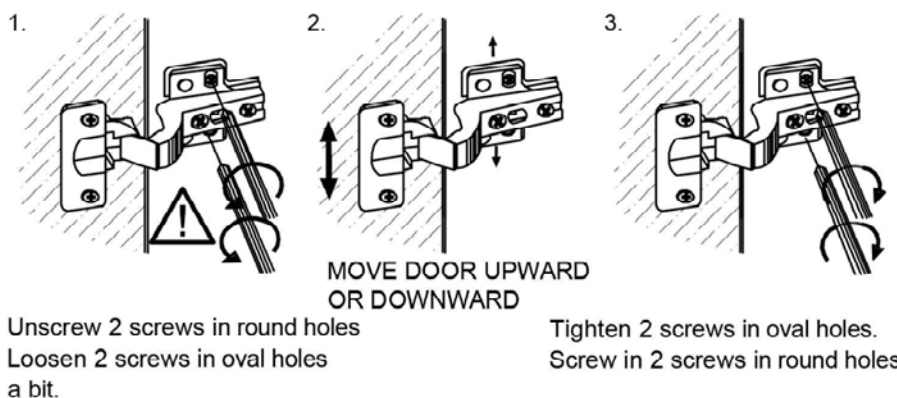

  STEP 14.3
Adjust the flush between
door panel and side panel

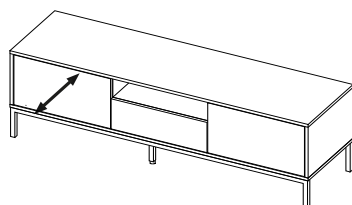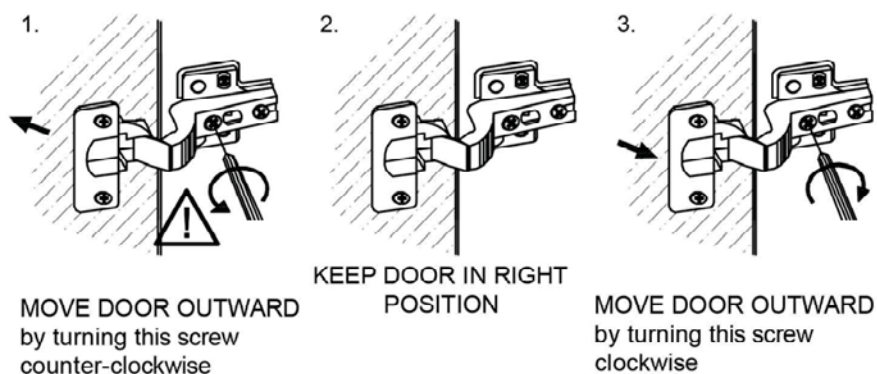

STEP 14.4
Adjust the gap between
door panel and side panel

