
## Assembly instructions

## zuiver°

## 8100003 MIRROR LEANING

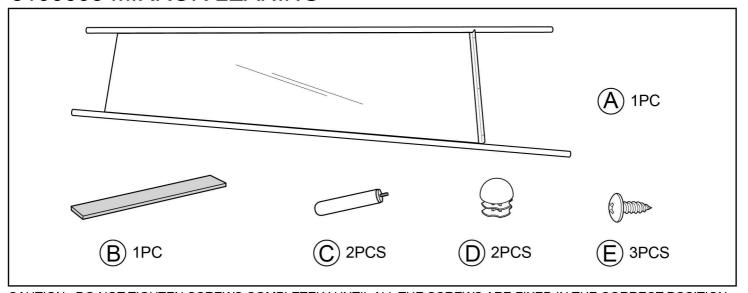

CAUTION: DO NOT TIGHTEN SCREWS COMPLETELY UNTIL ALL THE SCREWS ARE FIXED IN THE CORRECT POSITION

